

S U H i M a r

SUMINISTROS HIDRAULICOS



RACORERIA

ROSCA GAS - BSP

ESFERICA SOLDAR



Medida

1/4
3/8
1/2
3/4
1"

ESFERICA ROSCADA



Medida

Rosca

1/4 1/4
3/8 **3/8**
1/2 1/2
3/4 **3/4**
1" 1"

TORNILLO SIMPLE



Rosca

1/8
1/4
3/8
1/2
3/4
1"

TORNILLO DOBLE



Rosca

1/4
3/8
1/2
3/4
1"

TUERCA DE UNIÓN



Rosca

1/4
3/8
1/2
3/4
1"
1"1/4
1"1/2
2"

CONO DE AJUSTE



Medida

1/4
3/8
1/2
3/4
1"
1"1/4
1"1/2
2"

EMPALME MACHO
BSP - BSP



Rosca 1	Rosca 2
1/8	1/8
1/8	1/4
1/8	3/8
1/4	1/4
1/4	3/8
1/4	1/2
3/8	3/8
3/8	1/2
3/8	3/4
1/2	1/2
1/2	5/8
1/2	3/4
1/2	1"
5/8	5/8
5/8	3/4
3/4	3/4
3/4	1"
3/4	1"1/4
1"	1"
1"	1"1/4
1"	1"1/2
1"1/4	1"1/4
1"1/4	1"1/2
1"1/4	2"
1"1/2	1"1/2
1"1/2	2"
2"	2"

EMPALME MACHO
BSP - NPT



Rosca BSP	Rosca NPT
1/4	1/4
1/4	3/8
3/8	1/4
3/8	3/8
3/8	1/2
1/2	3/8
1/2	1/2
1/2	3/4
3/4	1/2
3/4	3/4
3/4	1"
1"	3/4
1"	1"

**ADAPTADOR
MACHO-HEMBRA
DOBLE ROSCA**



Rosca Macho	Rosca Hembra
1/8	1/4
1/4	1/8
1/4	1/4
1/4	3/8
3/8	1/4
3/8	3/8
3/8	1/2
1/2	3/8
1/2	1/2
1/2	3/4
3/4	1/2
3/4	3/4
3/4	1"
1"	3/4
1"	1"
1"	1"1/4
1"1/4	1"
1"1/4	1"1/2

**ADAPTADOR
MACHO-HEMBRA
ROSCA INTERIOR**



Rosca Macho	Rosca Hembra
3/8	1/4
1/2	1/4
1/2	3/8
3/4	3/8
3/4	1/2
1"	1/2
1"	3/4
1"1/4	3/4
1"1/4	1"
1"1/2	1"
1"1/2	1"1/4
2"	1"1/2

TUERCA PASANTE



Rosca
1/4
3/8
1/2
3/4
1"
1"1/4
1"1/2
2"

**JUNTA
METAL-GOMA**



Medida
1/8
1/4
3/8
1/2
5/8
3/4
1"
1"1/4
1"1/2
2"
6mm
8mm
14mm
16mm
18mm
22mm
24mm

**MACHO SOLDABLE
TESTA**



Rosca

1/4
3/8
1/2
3/4
1"
1"1/4
1"1/2

**MACHO SOLDABLE
ENCAJE**



Rosca

1/4
3/8
1/2
3/4
1"
1"1/4
1"1/2

TUERCA CIEGA



Rosca

1/8
1/4
3/8
1/2
3/4
1"

**TAPON
TUERCA LOCA**



Rosca

1/8
1/4
3/8
1/2
3/4
1"
1"1/4

**TAPON MACHO
HEXAGONAL**



Rosca

1/8
1/4
3/8
1/2
3/4
1"
1"1/4
1"1/2


**TAPON MACHO
ALLEN C/JUNTA**



Rosca

1/8
1/4
3/8
1/2
3/4
1"

**TAPON MACHO
ALLEN NPT**

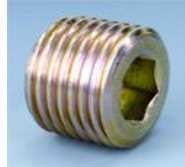

Rosca

1/8
1/4
3/8
1/2
3/4
1"

**ADAPTADOR
MACHO FIJO
TUERCA LOCA**



**Rosca
Macho**

**Rosca
Hembra**

1/8	1/8
1/8	1/4
1/4	1/4
1/4	3/8
3/8	3/8
3/8	1/2
1/2	1/2
1/2	3/4
3/4	3/4
3/4	1"
1"	1"
1"1/4	1"1/4
1"1/2	1"1/2

**ADAPTADOR
TUERCA LOCA**



Rosca 1 Rosca 2

1/4	1/4
3/8	3/8
1/2	1/2
3/4	3/4
1"	1"
1"1/4	1"1/4

PASATABIQUES



Rosca

1/8
1/4
3/8
1/2
5/8
3/4
1"
1"1/4

**TUERCA
PASATABIQUES**



Rosca

1/8
1/4
3/8
1/2
5/8
3/4
1"
1"1/4

CODO ACCESORIAL
90°
MACHO FIJO
TUERCA LOCA



Rosca Macho	Rosca Hembra
1/4	1/4
3/8	3/8
1/2	1/2
3/4	3/4
1"	1"
1"1/4	1"1/4
1"1/2	1"1/2

CODO ACCESORIAL
90°
TUERCA LOCA
TUERCA LOCA



Rosca 1	Rosca 2
1/4	1/4
3/8	3/8
1/2	1/2
3/4	3/4
1"	1"
1"1/4	1"1/4
1"1/2	1"1/2

CODO ACCESORIAL
45°
MACHO FIJO
TUERCA LOCA



Rosca Macho	Rosca Hembra
1/4	1/4
3/8	3/8
1/2	1/2
3/4	3/4
1"	1"
1"1/4	1"1/4
1"1/2	1"1/2

CODO 90°
MACHO FIJO



Rosca 1	Rosca 2
1/4	1/4
1/4	3/8
3/8	3/8
3/8	1/2
1/2	1/2
1/2	3/4
3/4	3/4
3/4	1"
1"	1"
1"1/4	1"1/4

**CODO 90°
MACHO ORIENTABLE**



Rosca 1	Rosca 2
1/4	1/4
3/8	3/8
1/2	1/2
3/4	3/4
1"	1"

**CODO 90°
MACHO FIJO
TUERCA LOCA**



Rosca Macho	Rosca Hembra
1/4	1/4
3/8	3/8
1/2	1/2
3/4	3/4
1"	1"
1"1/4	1"1/4
1"1/2	1"1/2

**CODO 90°
HEMBRA FIJA**



Rosca 1	Rosca 2
1/4	1/4
3/8	3/8
1/2	1/2
3/4	3/4
1"	1"
1"1/4	1"1/4

**TE
MACHO FIJO**



Rosca Central	Rosca Lateral 1	Rosca Lateral 2
1/4	1/4	1/4
3/8	3/8	1/4
3/8	3/8	3/8
1/2	1/2	3/8
1/2	1/2	1/2
3/4	3/4	1/2
3/4	3/4	3/4
1"	1"	3/4
1"	1"	1"
1"1/4	1"1/4	1"1/4

TE
TUERCA LOCA
CENTRAL



Rosca 1	Rosca 2	Rosca 3
1/4	1/4	1/4
3/8	3/8	3/8
1/2	1/2	1/2
3/4	3/4	3/4
1"	1"	1"
1"1/4	1"1/4	1"1/4

TE
TUERCA LOCA
LATERAL



Rosca 1	Rosca 2	Rosca 3
1/4	1/4	1/4
3/8	3/8	3/8
1/2	1/2	1/2
3/4	3/4	3/4
1"	1"	1"
1"1/4	1"1/4	1"1/4

TE
HEMBRA FIJA



Rosca 1	Rosca 2	Rosca 3
1/4	1/4	1/4
3/8	3/8	3/8
1/2	1/2	1/2
3/4	3/4	3/4
1"	1"	1"
1"1/4	1"1/4	1"1/4